### **MICRO**Slot

### **TBar**


#### What to Know

Risk of fire and electrical shock. Installation requires knowledge of electrical systems and should be installed by a qualified electrician. If not qualified, **DO NOT ATTEMPT INSTALLATION.** 




Once the grid structure has been installed, engage the fixture into the desired location. Insert one end of the fixture at an angle and then the opposite end.



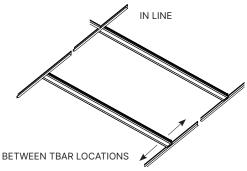




The fixture can be installed in line, replacing a Tbar or freely between Tbar locations. When installing in line, you may be required to fold over the Tbar fin, to allow clearance for the end cap.

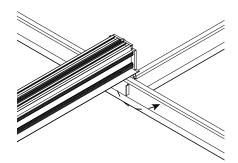




If required, Tbar fins are included and can be installed anywhere along the fixture body to received a Tbar that runs perpendicular to the fixture.

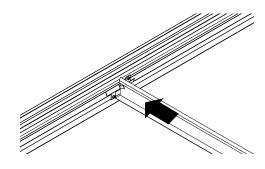



 An enclosed driver box is provided which is either fastened to the top of the fixture housing or installed remotely. Connect the fixture's Driver Box wires to the power source. Refer to the wiring diagram. Add structural supports as needed.




#### **Care Instructions:**

Wipe with a soft cloth only. Always avoid using harsh chemicals and/or cleaners.




## **MICRO**Slot
 
### **Continuous Run**






- You may be required to loosen a screw to free up the joiner bracket.
  - 1...
- Center the bracket between the 2 fixtures. Secure one side of the joiner to the fixture housing.

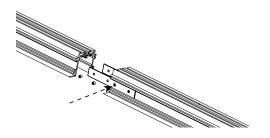

 Pull the fixtures together and tighten the remaining screws.



#### **Care Instructions:**

Wipe with a soft cloth only. Always avoid using harsh chemicals and/or cleaners.

# **MICRO**Slot

### Wiring Diagram



