


PRO Series Pendant

High-Performance Linear LED Pendant Mount

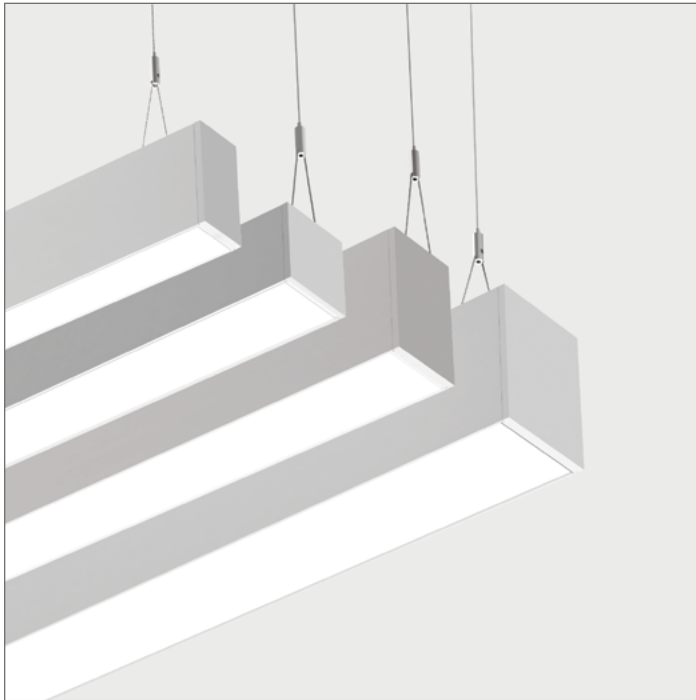




Integral Driver



PRO Series Pendants:

PROBeam2 **PROBeam3** **PROBeam4** **PROSquare3**

Warnings


-  Risk of fire and electrical shock
-  Turn off power at breaker
-  Installation requires knowledge of electrical systems and should be installed by a qualified electrician. If not qualified, **DO NOT ATTEMPT INSTALLATION.**

Care Instructions

-  Wipe with a soft cloth only
-  Always avoid using harsh chemicals and/or cleaners

STEP 1 — Hole Location

Mark hole locations on the installation surface, matching locations for the mounting hardware. Turn power off at the breaker before installing.

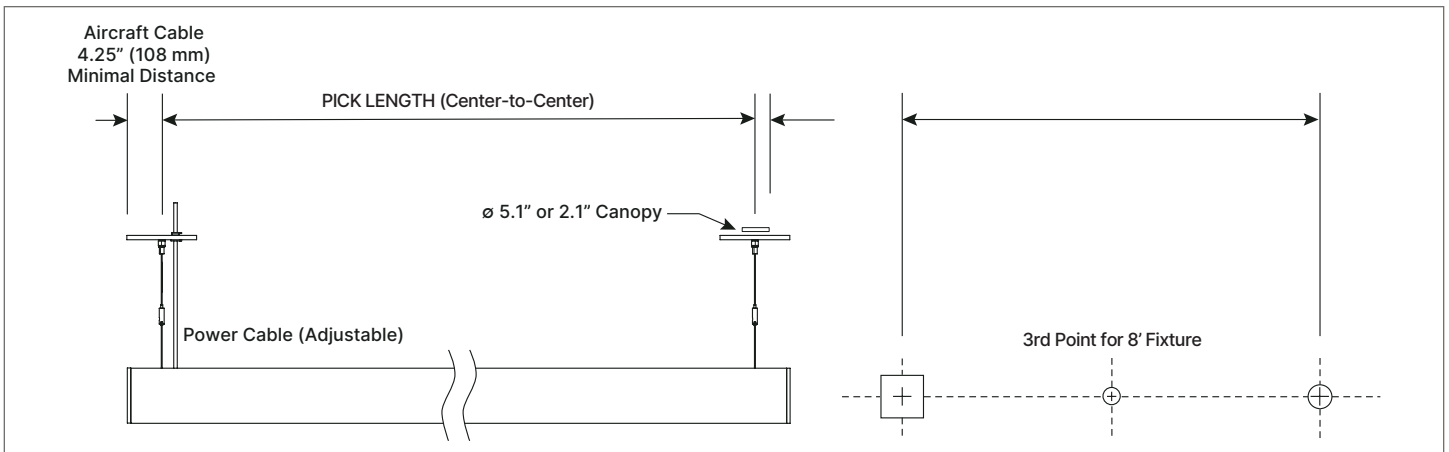

Designed & Built in
BOSTON


Declare



STEP 2 — Drywall/J-Box Mount

Proceed to Step 3 if not using Drywall/J-Box Mount.


Secure the Non-Power Canopy Assemblies to the ceiling with the aircraft cable hanging freely.

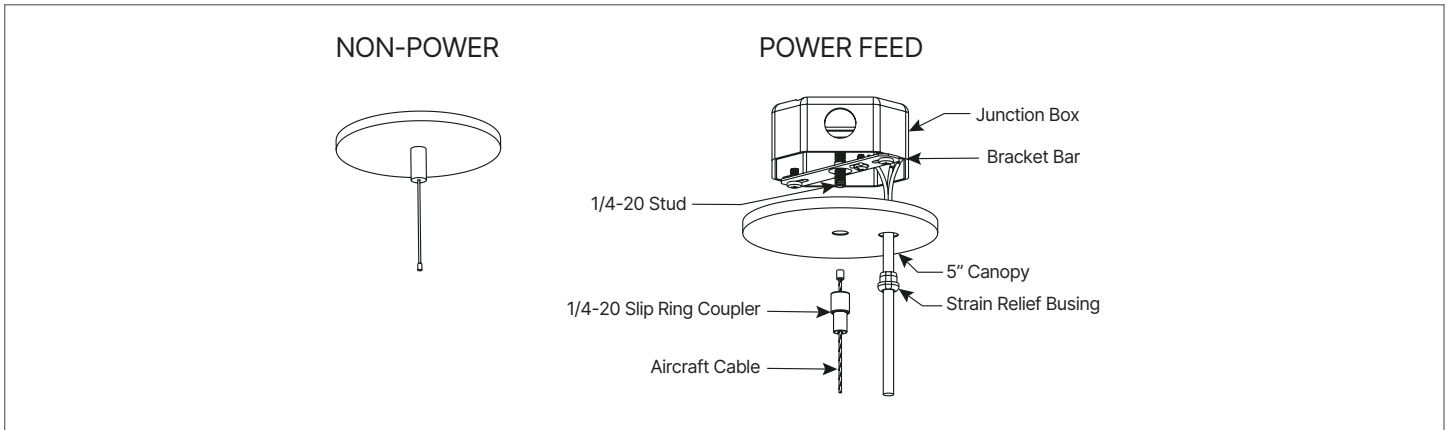

STEP 3 — T-Bar Mount


Proceed to Step 4 if not using T-Bar Mount.

Wire the Power Feed End through the T-Bar and secure the Canopy to the T-Bar grid.

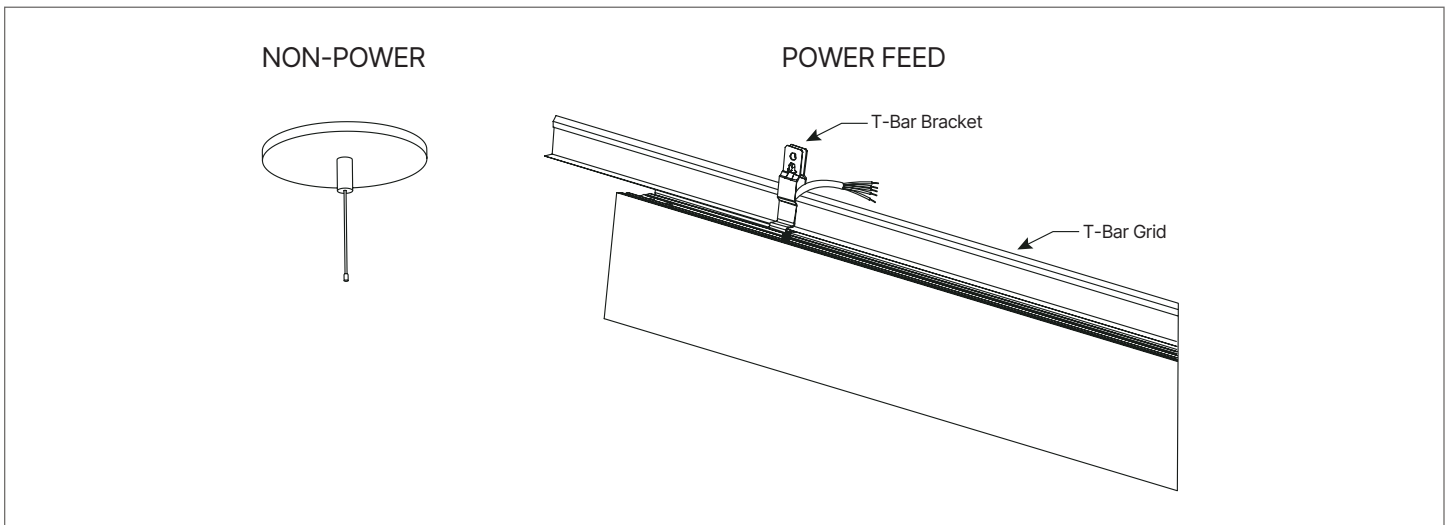


STEP 4 — Wiring

Wire the Power Feed End to the J-Box and secure the Canopy to the J-Box or Power Source.

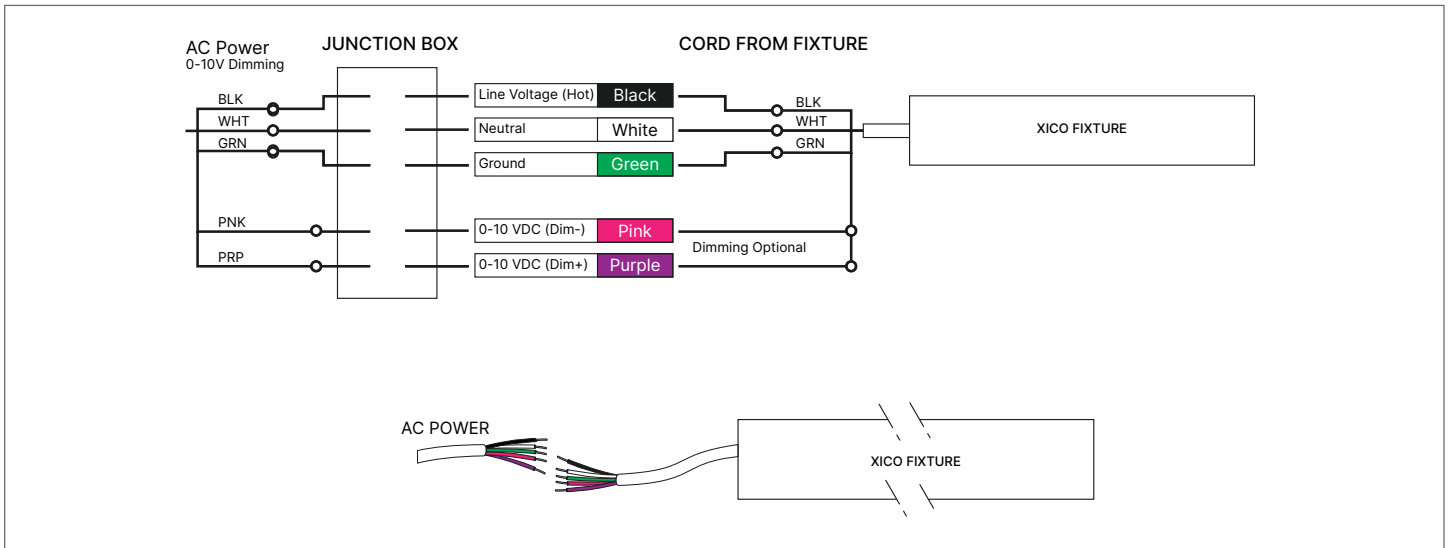


STEP 5 — Install Aircraft Cable

Feed the Aircraft Cable through the gripper at each end of the fixture. The mounting cables can travel along the top of the fixture for install placement.

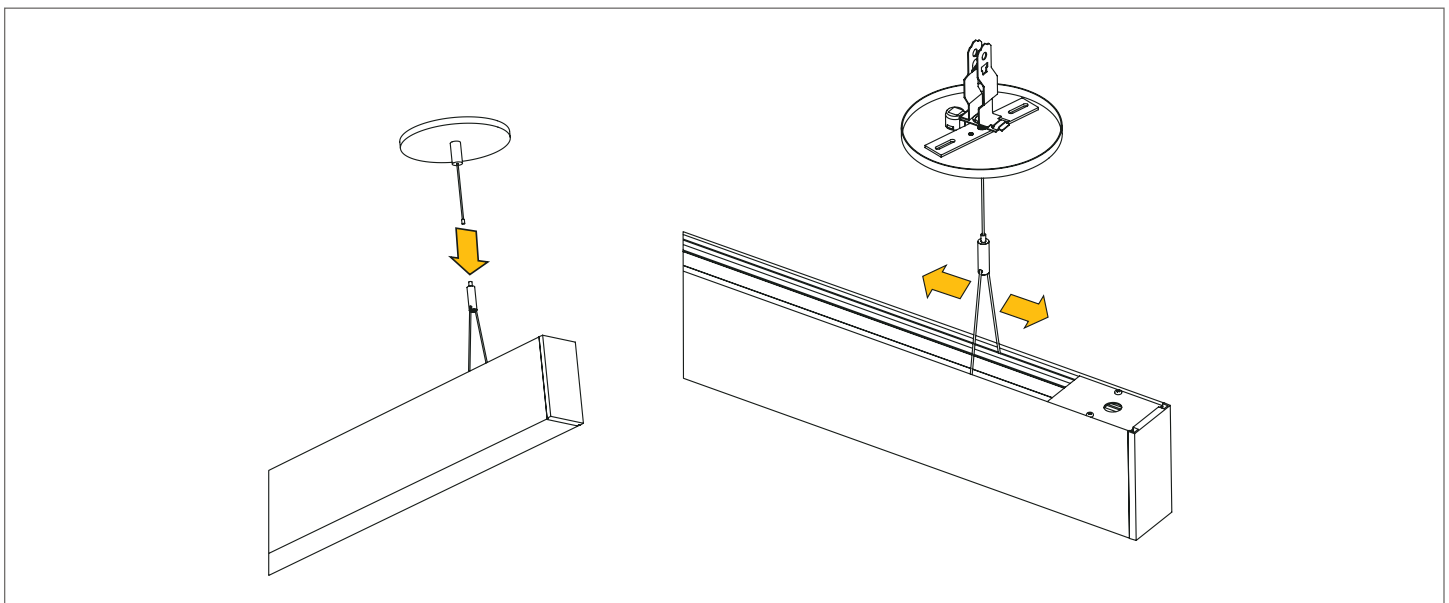


Continuous Run

Raise the non-powered fixture to the ceiling and secure with aircraft cable kit. Join internal quick connects and fit inside fixture as you slide the fixtures together using the joiner bracket. Tighten the cable gripper and screw to the fixture bodies. Foam inserts are in place to reduce light leak. Snap the lens(es) into fixture body.

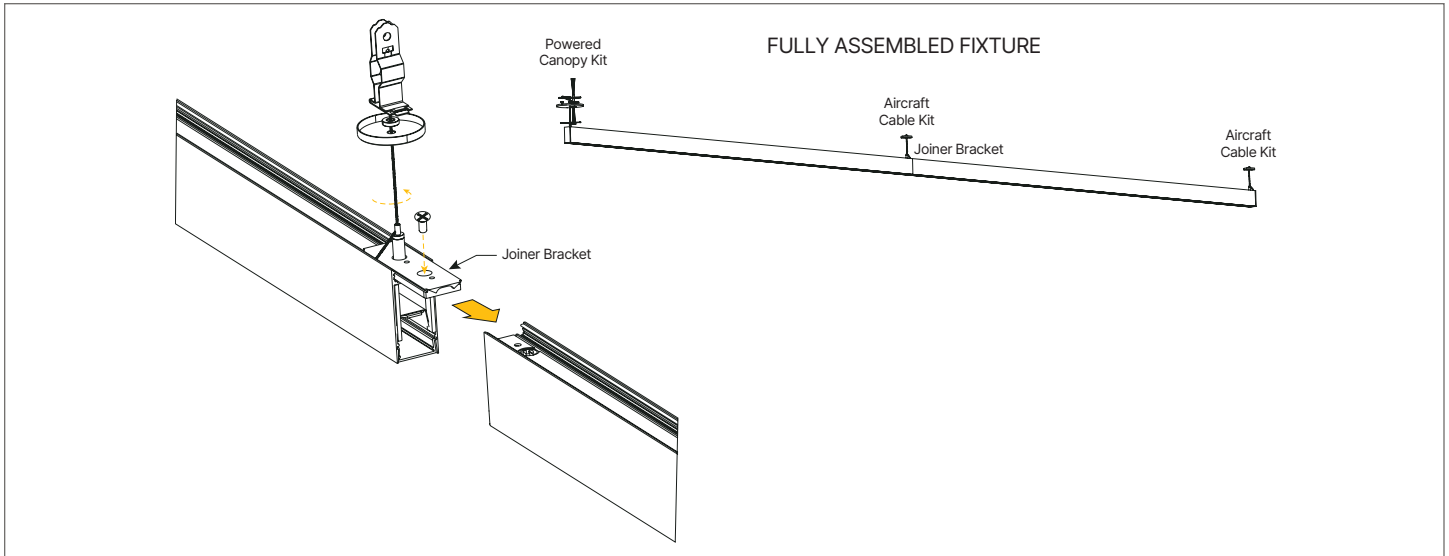

Corner Run

Using a flat surface, place the Inner and Outer Brackets on 1 end of the first corner run. Fasten the Outer bracket to the top of the fixture with the provided screws. Repeat for the inner bracket. Match the other corner run by sliding in place. Push the fixtures together and secure by fastening the fixture to the Inner and Outer brackets with the remaining screws. Replace the Lens and the Corner assembly is now complete. Pre-Install the Joiner by fastening it to the housing with a 1/4-20 screw (provided).

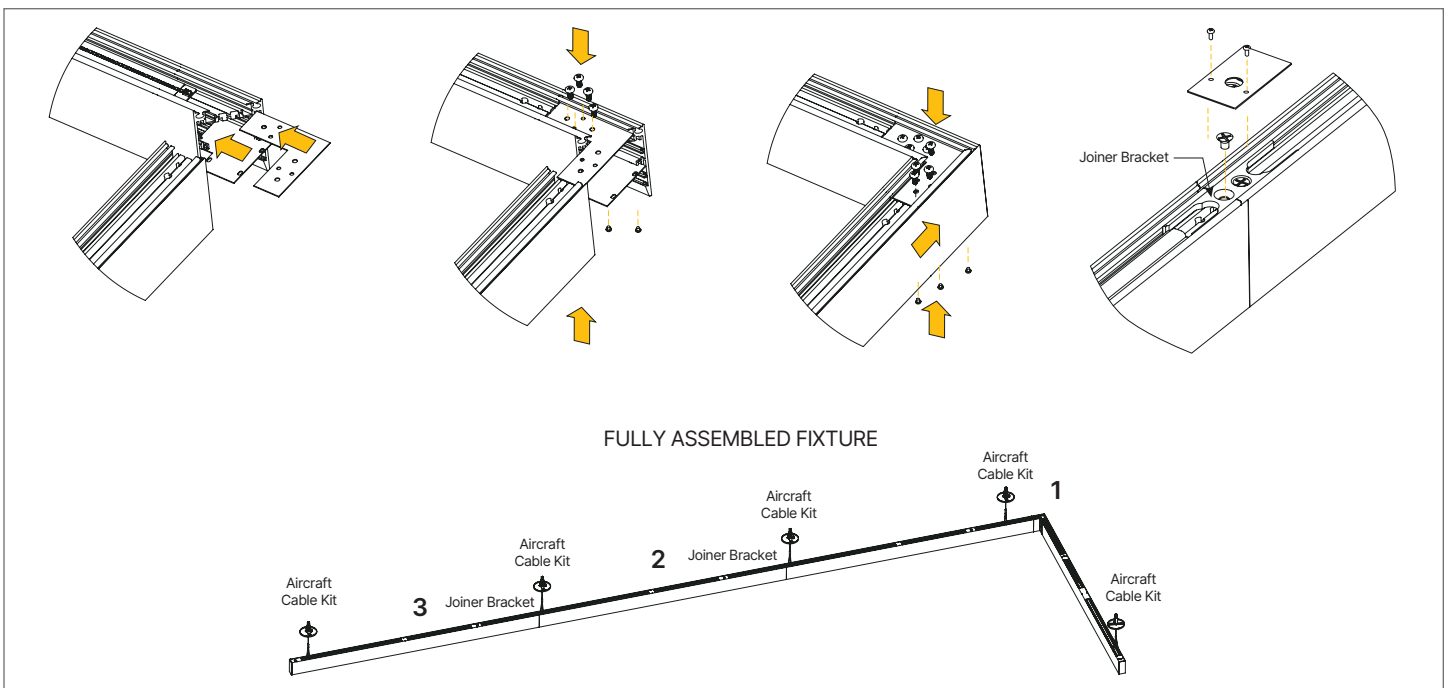

STEP 6 — Replace Lens(es)

If the lens was removed during installation, replace the lens by snapping it back into the fixture. Restore Power.

