NANOBeam 45

Surface Mount

What to Know

Risk of fire and electrical shock. Installation requires knowledge of electrical systems and should be installed by a qualified electrician. If not qualified, **DO NOT ATTEMPT INSTALLATION**.




Mounting clips are adjustable. Locate a secured stud when possible for each bracket and mark the locations.






Secure the mounting clips to the mounting surface with the appropriate hardware.

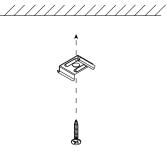


3

Install the remote driver Box. Raise the fixture to the mounting surface and connect the wires to an approved power source or Driver Box. Refer to the wiring diagram.

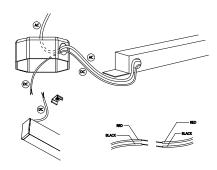



Raise the fixture and engage the mounting clips. The fixture will click when properly seated.

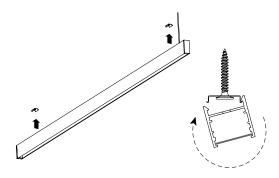



Final Installation



Care Instructions:

Wipe with a soft cloth only. Always avoid using harsh chemicals and/or cleaners.

PAGE 1 OF 3

NANOBeam 45


Surface Mount TBar

What to Know

Risk of fire and electrical shock. Installation requires knowledge of electrical systems and should be installed by a qualified electrician. If not qualified, **DO NOT ATTEMPT INSTALLATION.**




The fixture comes fully assembled with TBar clips for your grid ceiling framework, if specified.






Bring fixture up to the desired location on the TBar. Allow wires to pass through framework.






Engage the TBar clips by inserting the loose clip below the clip base that is mounted to the fixture. The clips will SNAP when fully engaged.

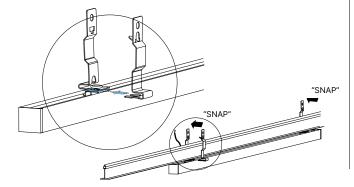



Secure the fixture to an appropriate structural support beam or hanger.

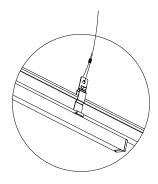



Locate and install the remote driver. Connect the fixtures DC cables to the Driver box. Connect AC power to the driver. Refer to the wiring diagram.



Care Instructions:


Wipe with a soft cloth only. Always avoid using harsh chemicals and/or cleaners.

PAGE 2 OF 3


NANOBeam 45

Wiring Diagram

XICO Driver Box

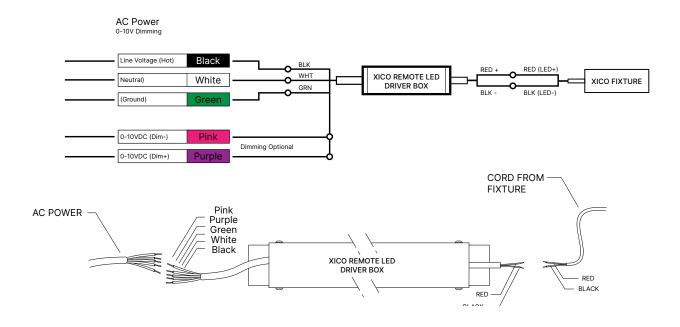

XICO Driver

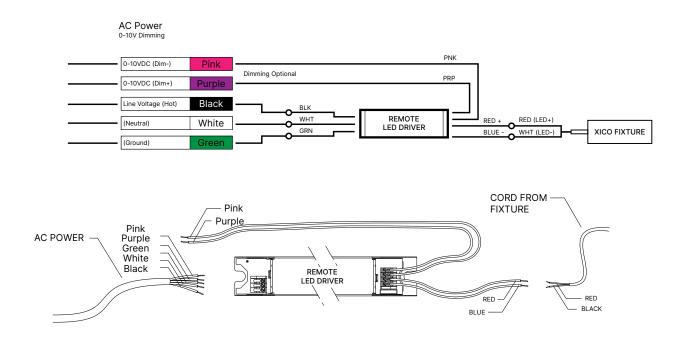



PAGE 3 OF 3